


# SOMA


F A B R I C A T I O N S

## SOMA HWY 17 HANDLEBAR INSTALLATION GUIDE

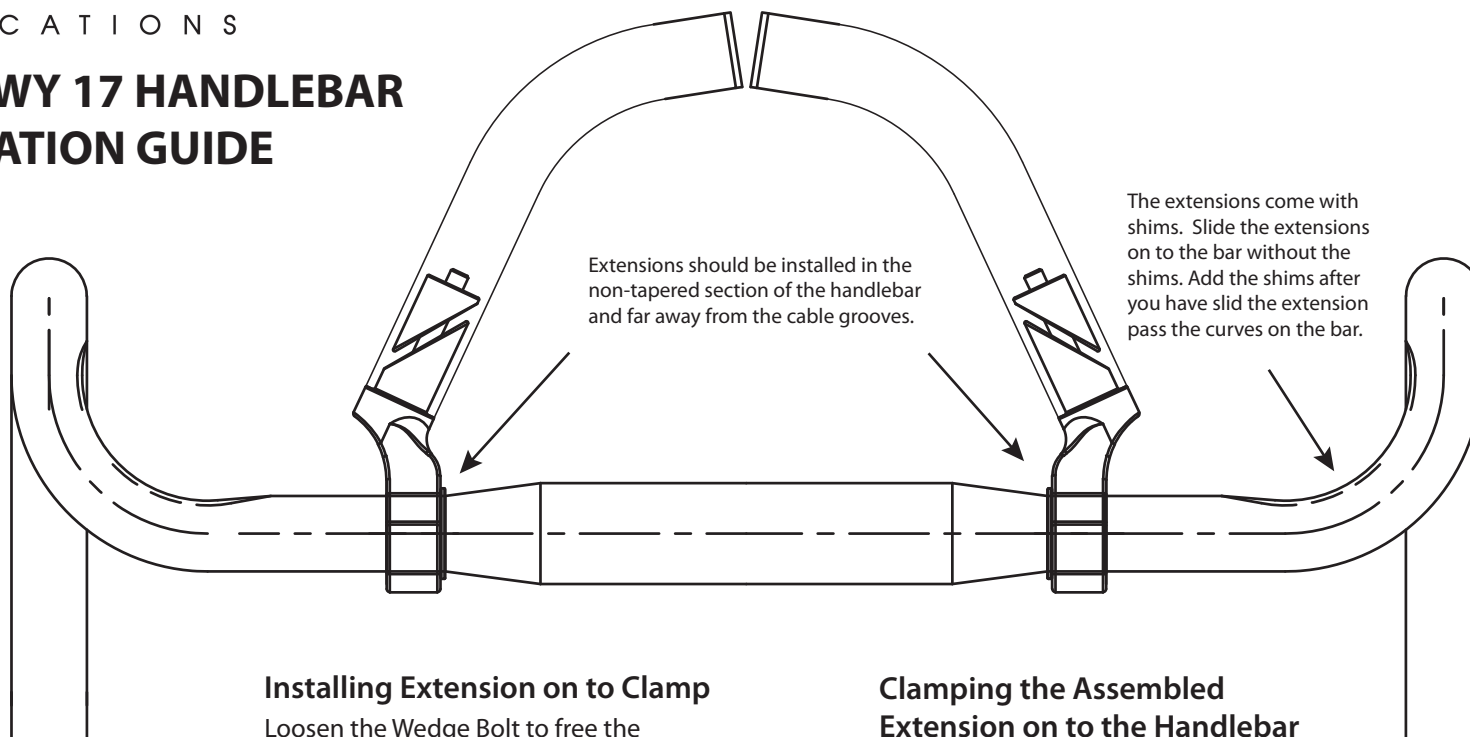

### Installing Extension on to Clamp

Loosen the Wedge Bolt to free the extension from the clamp. Twist the extension to the desired position. The extensions can face each other or angle up. Set them up mirror image to one another. Tighten the wedge bolts to lock extensions in place.

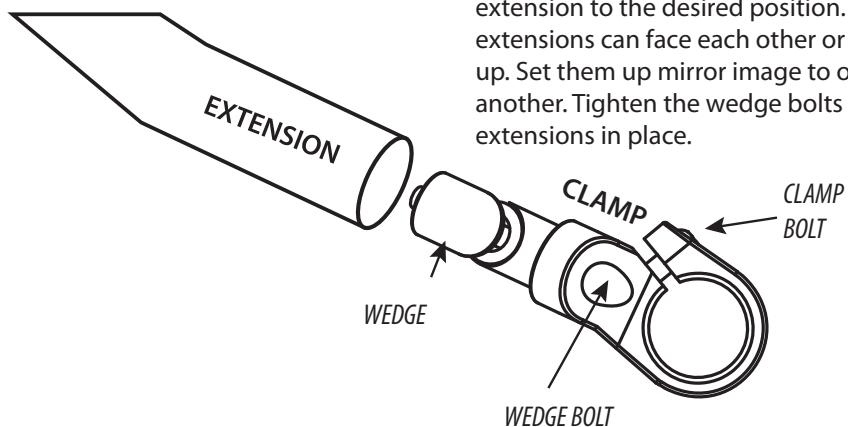

### Clamping the Assembled Extension on to the Handlebar

Loosen the Clamp Bolt. Slide the assembled extensions without the shims onto the bar to a safe area. Add the shims between the clamp and bar. Set the extensions at a desired angle and tighten the Clamp Bolt.

DO NOT apply grease between clamp and bar.

DO NOT use these extensions on different model handlebars. We cannot guarantee safe installation on other bars including other Soma bars.